














# BATTERY CHARGER / DC RECTIFIER

### RDA / RDAT AUTOMATION TYPE SERIES




The rectifier is SCR controlled AC/DC rectifier with input isolation transformer and with automatic constant voltage and constant current ability. It comes with 6 Pulse or 12 pulse design options depending on user requirements. The advantages of employing 12 pulse rectifier in industrial DC UPS systems are to have lower THDi (<10%) and higher pf at input (>0.9) as well as to secure redundancy since 12 pulse rectifiers are designed with one delta and one star connected transformers, so the unit itself behaves as two redundant rectifiers by its nature. Output current, battery current, boost and Float Charge Voltages are adjustable on the user-friendly control panel. Detailed alarm indicators help you to monitor all alarms from the front panel and monitor the auxiliary contacts from the MIMIC diagram. On LCD panel, all key parameters can be set, and real time base events and failures can be tracked remotely via RS 485/ModBus, Profibus, TCP/IP or SMS/Mail Order.


### 12 PULSE RECTIFIER CURRENT WAVE

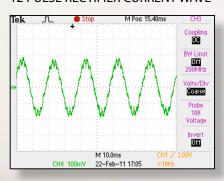

# 6 PULSE RECTIFIER CURRENT WAVE (DELTA-DELTA CONNECTION)

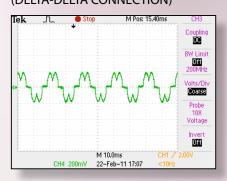

## 6 PULSE RECTIFIER CURRENT WAVE (DELTA-STAR CONNECTION)

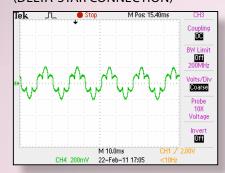




### STANDARD FEATURES

- Adjustable Timer for Boost Charging
- Adjustable Boost and Float Charge Voltages
- Automatic Boost Charge Selection according to boost / float current set value
- Adjustable Rectifier Output Current and Battery Charge Current
- LCD Display for DC Load / Battery Voltage , DC Load / Battery Current , Input AC Voltage / Line Current / Frequency
- Event History for all Electrical values and failures
- Automatic and Manuel Battery Test
- Boost inhibit facility for interlock redundant application
- Output Filter Inductor and DC Longlife Capacitor
- Electronic Over / Under Voltage, Over Current and Short Circuit Protections
- Isolated Output by Input Transformer and output halleffect current module

- Parallel Redundant Operation
- Boost and Float dropper control output for Ni-Cd and Lead Acid Battery (Optional)
- Input Filter and input surge Voltage protection
- Internal Over Temperature protection
- Temperature Compensation for Battery
- Low Battery Indication and Alarm contacts
- Rectifier Failure Indication and Alarm contacts
- Rectifier Over Voltage Indication and Alarm contacts
- Over Temperature Indication and Alarm contacts
- Line Failure Indication and Alarm contacts
- Input MCB Indication and Alarm contacts
- Load MCB Indication and Alarm contacts
- Battery MCB Indication and Alarm contacts
- Earth Fault Indication and Alarm contacts
- Reverse Battery Connection Protection
- Reset Button

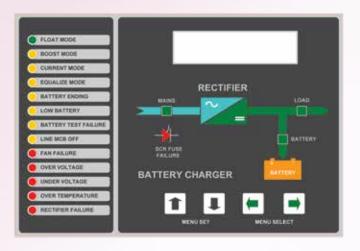

### **OPTIONS**

RS 485/ModBus, Profibus, TCP/IP or SMS/Mail Order communication.

Silicon Dropper Module For Load Output

LVD Deep Discharge Battery Protection contactor.

Cabin options for Rectifier and Battery Group

Analogue Meterings for Output and Battery

Power Analyzer option for Input



## **AUTOMATIC BOOST**


Automatic boost charge can also be selected on menu. The automatic boost menu has the options for selecting the boost and float current based on battery capacity. Suitable float and boost currents of the battery are set before selecting the automatic boost option. After the set-up, the automatic boost function will monitor the battery current and select boost or float option by referring to the set values. If the charging current is higher than the set boost current, the system will select boost and if the charging current is lower than the set float current the system will select float option. In case of low battery alarm, the automatic boost will select boost option until the battery charging current reaches to the set float value.

## **BATTERY CHARGING CHARACTERISTICS** Battery voltage Boost voltag Float voltage Time hour VOLTAGE (V) Battery current Charge currer Amper (I) Boost current Battery Output Float current Time hour Constant voltage / constant current rectifier output V/I characteristics 0 6 8 Battery automatic boost/float charge technique Ideal and safe charging of batteries is sustained Ideal output characteristic via fast by setting boost and float charge currents. In microprocessor control this way unnecessary boost conditions and deformation of batteries currents are preve



### HIGH PROTECTION

FULLY CONTROLLED THRYSTOR RECTIFIER MODULE

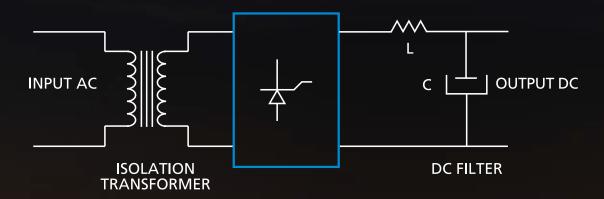

### **COMPLETE ISOLATION**

PMI DC Chargers are fully isolated since an isolation transformer is placed in between the input and output and because the DC current is controlled by a DC current module. Therefore, the load is always safe even at high input voltage and congested mains conditions. In addition, the failure risk is minimized as semi-conductors are used for the rectifier. Standard L-C filters at the output maintain safe charging of the battery groups.

### **PROTECTIONS**

The input and output of the charger are protected against improper use and line disturbances electronically. Input and output can be switched by circuit breakers individually. It has self-protection against over temperature. The alarm contacts can be used for external system in the case of any anomaly. The output is fully isolated from the AC line input. The Charger has a modular design to provide service and maintenance simplicity.

### DC RIPPLE < 1%

Input and output are protected with MCBs and all settings like boost charge, floating charge and battery charge current can be adjusted via front panel digitally. DC output is filtered by L/C, so DC ripple at full load always lower than 1% to increase battery life. All rectifiers have standards low-battery and rectifier failure alarm.

### **WIDE RANGE OF USE**

DC chargers are ideal for transformer energy distribution centers, gas oil energy distribution centers, natural gas energy distribution centers, mining industry security and lighting, building automation systems and for special telecommunication applications.



### **PARALLELING**

The Charger has a modular design to provide service and maintenance simplicity. The outputs of the Battery Chargers can be connected in parallel. The parallel system can be active load sharing or hot-standby. Besides this, parallel system can be placed in one unit industrial cabin as seen from the picture on the right side or they can be placed in different cabins based on the requirement.

### **BOOST INHIBIT FUNCTION**

Boost Inhibit Function is optionally employed when two DC Chargers with two battery groups operate in a parallel redundant mode. In parallel operation, if two rectifiers start boost-charging at the same time there is danger the load would be damaged by overvoltage. So, the principle idea of Inhibit facility is to block any one of the two chargers feeding the load in Boost mode when the other rectifier is charging the batteries in Boost mode; so the system prevents applying overvoltage to the load. This function is primarily handled by a powerful communication between two rectifiers and the use of contactors









## INTELLIGENT BATTERY TEST FUNCTION

The battery test function checks the battery performance by discharging the battery with a constant current for a periof of time. During the test time both the battery and charger delivers current to the load to ensure system performance. The system checks the battery health by comparing the battery

voltage with set low battery voltage, which is indicated in battery discharge data. In case of failure, the alarm is provided with LED on the front panel. This fuction can be activated manually as well as automatically by entering test interval data via front panel or remote PC.








### REMOTE MONITORING

On both LCD panel and communication interface, all key parameters can be set and real time base events and failures can be tracked. In parallel operation multiple rectifiers can be controlled by the help of same communication interface. The communication is executed via RS 485/ModBus, Profibus, TCP/IP or SMS/Mail Order.




### PRODUCT PERFORMANCE

### **SOFT START FEATURE**

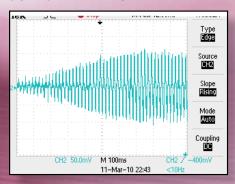


No inrush current at start up

### MICROPROCESSOR CONTROL

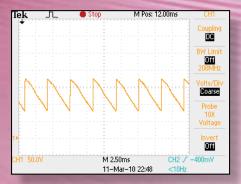

### AC RIPPLE AT FULL LOAD

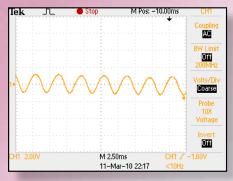


### AC Ripple at full load < 1 %

Battery life is extended significantly via low ripple voltage due to low heat

### **DYNAMIC RESPONSE**




In sudden load changes dynamic response is 300 msec without overshoot or undershoot to secure the load

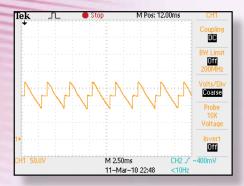

### Fully microprocessor controlled rectifier

- ► Thyristor angle is adjusted with load change
- ▶ 1/2 Load: Phase angle shortened
- Full Load: Phase angle at max

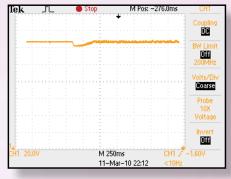

With this capability rectifier can be used as a power supply even without battery safely with DC Loads

## DC CHARGER: TECHNICAL SPECIFICATIONS



GENERAL			
Model	Monophase Input	Threephase Input	
Topology	For 3 phase input 6 Pulse Thyristor controlled AC/DC Rectifier with input isolation transformer Optional 12 Pulse Thyristor controlled AC/DC Rectifier with input isolation transformer		
INPUT			
Nominal Voltage	110 VAC / 115VAC /208 VAC / 220 VAC / 230 VAC / 240 VAC ±15%	190 VAC / 200 VAC /380 VAC / 400 VAC / 415 / 480 VAC ±15%	
Nominal Frequency	50 / 60 Hz ±5%		
Cosφ	>0.8 Inductive (>0.9 with 12 Pulse Rectifier)		
Transformer	Galvanically isolated		
ITHD	<35% (standard); <10% (with 12 Pulse Rectifier)		
Input Protection	Thermic-Magnetic Over Current Protection, Over Voltage Protection, Phase Sequence Free Operation (3 Phase), Soft Start, MCB		
OUTPUT			
Nominal Output Voltage	12 VDC / 24 VDC / 48 VDC / 110 VDC / 220 VDC		
Output Voltage Adjustment	24VDC output: 10VDC to 30VDC, 48VDC output: 48VDC to 60VDC, 110VDC output: 110VDC to 160VDC, 220VDC output: 220VDC to 300VDC		
Output Current Adjustment	0-100% of Nominal Output Current		
Battery Charge Current Adjustment	0-100% of Nominal Output Current		
Boost Charge Voltage	100% to 120% of Floating Output Voltage		
Boost voltage (V/C)	2,4 lead acid battery 1,60 NiCd Battery (Might change based on battery brand)		
Float voltage (V/C)	2,23 lead acid battery 1,40 NiCd battery (Might change based on battery brand)		
Output Static Voltage Tolerance	±1% (Lower values available upon request)		
Nominal Output Current	Available upto 1000 Amp (12 Pulse over 400 Amp)		
Maximum Output Current	100% of nominal output current		
Output Ripple	<1% RMS AC of Output Voltage		
Dynamic Response (with battery group)	±2% of Output Voltage (100% load change)		
Battery Charging Principle	Constant Current/ Constant Voltage		
Output Protection	Short Circuit Protection, Over Voltage Protection, Reverse Voltage Protection, Short Circuit, MCB or NH Fuse (based on current value)		
Battery Protection	L-C filters, Overcurrent Electronic protection, Over Voltage Protection and Thermic Fuse		
GENERAL			
Boost Timer	0 – 99.9 hours adjustable		
Cooling	Forced fans with smart fan controlling system (Natural Cooling Optional)		
Isolation Voltage	2500VAC input/chassis and output/chassis		
Efficiency at full load	>80% (Higher values optional) >90% (Higher values optional)		
MTBF	100,000 Hrs. (w/out battery group)		
Operating Temperature	-10 / + 40 °C (Higher Temperature Control, Optional)		
Protection Level	IP20 (Standard); IP31 / IP42 / IP54 (Optional)		



Enclosure Material	Mild Steel, Zinc-phosphate coated; 100 µm electrostatic paint; 1.5 mm thickness	
Cable Entry	From Bottom; Optional from Top	
Access to Batteries	Batteries and rectifier in the same cabinet with front access (optional)	
Relative Humidity	5% to 90% non condensing	
Circuit Breakers	Thermic – magnetic circuit breakers for Input, Battery and Load (standard upto 60A; optional above 60A)	
Silicon Dropper	Available on request (For load output)	
Reset Button	Used for re-operation in case of failure of the system. (Without disconnecting the load from battery group)	
Boost inhibit	Interlock application inhibits one of the rectifiers for boost operation in parallel redundant mode (optional)	
DISPLAY PANEL		
Front Panel Measured Values	LCD Display for Load Output Voltage / Current , Battery Output Voltage / Current and Line Voltage / Line Current / Frequency	
Front Panel Indicators	Float mode, Boost mode, Current mode, Equalize Mode, Battery ending, Low battery, Battery test failure, Line failure, Fan failure, Over voltage, Under voltage, Over temperature, Rectifier failure, SCR fuse failure (LED indication), Line MCB (LED indication), Load MCB (LED indication), Battery MCB (LED indication)	
Front Panel Set Menu	Boost charge voltage, Float charge voltage, Low battery voltage, Battery test, Charger output current, Battery charge current, Battery automatic boost current and float current, Auto & Manual boost selection, Manual boost time, LED test and On - OFF.	
Event History	Last 250 events recorded and displayed on front panel and on PC via remote communication	
Time and Date	Adjustable	
ALARM CONTACTS		
Charger Failure	Open or closed free contacts	
Low Battery	Open or closed free contacts	
Rectifier over voltage	Open or closed free contacts	
Over temperature	Open or closed free contacts	
Line Failure	Open or closed free contacts	
Load MCB	Open or closed free contacts	
Battery MCB	Open or closed free contacts	
Line MCB	Open or closed free contacts	
Earth Fault	Open or Closed free contacts	
ENVIRONMENT		
Operating Temperature	-10 / +40 °C	
Relative Humidity	5 - 90 %	
Operating Altitude	Max. 2000 Mt.	
Noise Level	Max. 60 db	
Electrical Standards	IEC 60146-1-1 / EN 50091-1 (Security) / EN 50091-2 (EMC)	
COMMUNICATION & PA	ARALLELING	
Communication (Optional)	RS 485/ModBus, Profibus, TCP/IP or SMS/Mail Order: - Timer Setting, Boost Voltage Setting, Float Voltage Setting, Output current setting, battery current setting, automatic boost setting and Reset buttons.	
Paralleling (Optional)	Parallel Redundant (No need for extra kit for paralleling)	
9 ,	tended for general use purpose. Please refer to product datasheets of specific projects. For more information, please contact your local representative.	

The information contained herein is solely intended for general use purpose. Please refer to product datasheets of specific projects. For more information, please contact your local representative.



### Key Global References











































































#### **GROUP COMPANIES**

PMI Elektrik Sistemleri Dis Tic. Ltd. Sti Ortadoğu Elektronik Sanayi Ltd. Şti.

### **SALES & MARKETING**

Perpa Elektrokent A Blok

Kat: 11 No:1449-1451

34384, Okmeydani ISTANBUL / TURKEY

Tel: +90 212 320 35 95 / +90 212 320 35 96

Fax: +90 212 320 35 97 E-mail: info@pmienergy.com

### MANUFACTURING PLANT AND R&D

Modern Keresteciler Sanayi Sitesi 1. Cad. 23. Sok. No:14 Saray / Kazan / ANKARA / TURKEY

www.pmienergy.com

